

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, to reduce the risk of fire, electric shock, and personal injury, including the following:

Read all instructions.

- To protect against a risk of electric shock, do not immerse power unit, cord, plug, or any other part of this appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before cleaning, servicing, or inspecting the product.
- Store this product in a dry area indoors when not in use and out-of-reach of children.
- Do not operate any appliance with a damaged power unit, cord or plug or after the product malfunctions or is dropped or damaged in any manner. Return the product to the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment. Or, call the appropriate toll-free number listed on the cover of this manual.
- To use, plug cord into a properly grounded electrical outlet.
- Do not abuse cord. Never carry the product by the cord or yank the cord to disconnect. To disconnect, grasp plug and remove from outlet. Keep cord away from heat, oil, and sharp edges.
- The power unit must be securely mounted per the instruction manual. Do not allow the power unit to rest on the ground. Do not suspend the power unit between the electrical cords.
- The cord between the power unit and the product must not be draped as it may cause a trip hazard. Route the cord carefully away from walking or play areas.
- Keep children and pets away from the product.
- This product is intended primarily for outdoor use.
- This product is intended for household use only not for commercial or industrial use. Use for anything other than intended will void the warranty.

SAVE THESE INSTRUCTIONS

WARNING

To reduce the risk of electric shock hazard use only with an extension cord suitable for outdoor use. Always connect extension cords to a fused line or one protected by a circuit breaker.

IMPORTANT: Be sure to turn the unit off, unplug, wrap the cord, and remove the unit from the area BEFORE MOWING the grass.
Do not place the SonicWeb™ Insect Control near a bird feeder.

POLARIZED PLUG
This appliance has a polarized plug — one blade is wider than the other. As a safety feature, this plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse it and try again. If it still does not fit, contact an electrician. Do not attempt to defeat this safety feature.

READ AND SAVE THIS USE AND CARE BOOK

POR FAVOR LEA ESTE INSTRUCTIVO ANTES DE USAR EL PRODUCTO

CONSERVER CE GUIDE D'ENTRETIEN ET D'UTILISATION

Applica™

SonicWeb™


Biting Insect Control (English)

Control de insectos

que pican (Español)

Contrôle des insectes

qui piquent (Français)

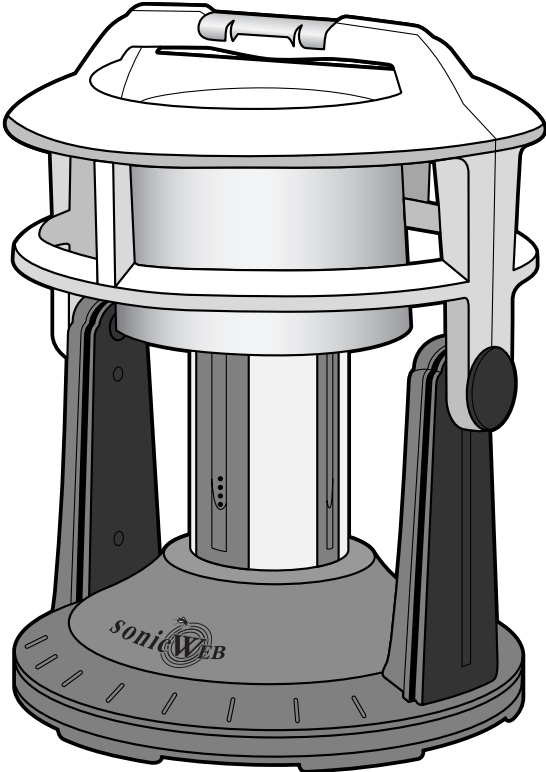

Accessories/Parts (USA/Canada)	1-800-738-0245
Accesorios/partes (EUA/Canadá)	
Accessoires/Pièces (É.-U./Canada)	

U.S.A./CANADA

MEXICO

1-866-766-4293 (1-866-SONIC WEB)

01-800-847-2309

<http://www.fightthebite.com>

Séries ICH500 Series

Need Help?

SERVICE OR REPAIR

For service, repair, or any questions regarding your appliance, call the appropriate “800” number on the cover of this book. Do NOT return the product to the place of purchase. Do NOT mail the product back to the manufacturer nor bring it to a service center. **You may also want to consult the website:** www.fightthebite.com OR www.sonicweb.com

FULL ONE-YEAR WARRANTY

Applica warrants this product against any defects that are due to faulty material or workmanship for a one-year period after the original date of consumer purchase. This warranty does not include damage to the product resulting from accident, misuse, or repairs performed by unauthorized personnel. If the product should become defective within the warranty period, or you have questions regarding warranty or service, call Consumer Assistance and Information toll free at: 1-866-766-4293.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province.

¿Necesita ayuda?

SERVICIO O REPARACIONES

Para cualquier servicio, reparación, o pregunta con respecto al producto, por favor llame al número gratis “800” apropiado que aparece en la portada de este manual. Por favor No devuelva el producto al lugar de compra, NO lo envíe de vuelta por correo al fabricante ni lo lleve a un ningún centro de servicio. **Consulte también nuestra página:** www.fightthebite.com O www.sonicweb.com

Un año completo de garantía (Este párrafo no aplica para EUA ni Canadá)

Applica garantiza este producto contra cualquier defecto originado por fallas en los materiales o en la mano de obra por un período de un año a partir de la fecha original de compra. Esta garantía no es valida cuando: a) el producto se hubiese utilizado en condiciones distintas a las normales, b) el producto no hubiese sido operado de acuerdo con el instructivo de uso que le acompaña, c) el producto hubiese sido alterado o reparado por personas no autorizadas. Si el producto resulta con defectos dentro del período de garantía lo repararemos o reemplazaremos de ser necesario, sin cargo alguno. Para que esta garantía sea válida debe presentar el producto con su recibo de compra y/o la tarjeta de registro correspondiente. Esta garantía le otorga derechos específicos, y usted podría tener otros que pueden variar en su país. Si tiene alguna pregunta, comuníquese con una sucursal o centro de servicio Black & Decker más cercano.

Nota: Usted podrá encontrar partes, componentes, consumibles y accesorios en los centros de servicio autorizados. Esta garantía incluye los gastos de transportación que se deriven de su cumplimiento dentro de su red de servicio.

Besoin d’aide?

ENTRETIEN OU RÉPARATIONS

Pour entretien, réparation ou toutes questions concernant l’appareil, appeler le numéro « 800 » approprié indiqué sur la couverture de ce manuel. NE PAS retourner l’appareil là où il a été acheté. Ne pas poster l’appareil au fabricant et ne pas l’apporter à un centre de réparations. On peut aussi consulter le site web : www.fightthebite.com O www.sonicweb.com

GARANTIE COMPLÈTE D’UN AN

Applica garantit ce produit contre tous vices de fabrication causés par des matériaux défectueux ou par la façon pendant une période d’un an à partir de la date du premier achat. Cette garantie ne couvre pas les dommages résultant d’accident, d’abus ou de réparations faites par du personnel non agréé. Si le produit devient défectueux pendant la période de garantie, ou si vous avez des questions sur la garantie ou le service, appeler le Service Clientèle et Informations au numéro sans frais : 1-866-766-4293.

Cette garantie vous octroie des droits légaux spécifiques et vous pouvez aussi avoir d’autres droits qui varient d’état à état ou de province à province.

SELLO O FIRMA DEL DISTRIBUIDOR

Fecha de compra _____

Modelo _____

Servicentro
Lázaro Cárdenas No. 18
Col. Obrera Del. Cuautémoc, Mex., D.F.
C.P. 06800 Tel. 01 800 50 833


Applica Consumer Products, Inc.

Copyright © 2002 Applica Consumer Products, Inc.
Pub. No. 177795-00-RV02
Printed in Mexico
Impreso en México
Imprimé au Mexique

Product may vary slightly from what is illustrated.
El producto puede variar ligeramente del ilustrado.
Le produit peut différer légèrement de celui illustré.

Product made in Mexico
Producto hecho en México
Produit fabriqué au Mexique

ACCESSORY KIT OFFER

Mail Order Form to:
Fox International
23600 Aurora Road
Bedford Heights, OH 44146
Attn: SonicWeb

Method of Payment
Check/MoneyOrder/Credit Card
Payable to:
Applica Consumer Products Inc.
Do not send cash.
C.O.D. Orders Not Accepted

Name _____

Street Address _____

City _____

State _____ Zip _____

Allow 4-5 weeks for delivery. Prices subject to change.

Product Description	Part Number	Price Each	Qty.	Total Amount
Accessory Kit (IGT100)	177975-00	\$19.99 <small>(US Currency)</small>		\$ _____

☐ VISA
☐ DISCOVER

☐ MASTERCARD
☐ AMERICAN EXPRESS

Card No.: _____
Expiration: _____
Cardholder's Signature: _____

Local Sales Tax
(OH, NY, TX)

\$ _____

Shipping & Handling

\$ 4.99

TOTAL AMOUNT

\$ _____

OFERTA DE CAJA DE ACCESORIOS

Formulario de pedido por correo:
Fox International
23600 Aurora Road
Bedford Heights, OH 44146
Attn: SonicWeb

Método de pago
Cheque/giro/Tarjeta de Credito a nombre de:
Applica Consumer Products Inc.
Favor de no enviar efectivo.
No se aceptan pagos acobrar.

Nombre _____

Dirección de domicilio _____

Ciudad _____

Estado _____ Código _____

Permita de 4-5 semanas para recibir los filtros. Los precios pueden variar.

Descripción del producto	Número de parte	Precio por unidad	Cantidad	Cantidad total
Caja de accesorios (IGT100)	177975-00	\$19.99 (\$E.U.)		\$ _____

☐ VISA
☐ DISCOVER

☐ MASTERCARD
☐ AMERICAN EXPRESS

No. de tarjeta: _____
Fecha de expiración: _____
Firma del portador: _____

Impuesto de venta local
(OH, NY, TX)

\$ _____

Costo de envío

\$ 4.99

CANTIDAD TOTAL

\$ _____

OFFRE DU BOÎTE D'ACCESSOIRES

Poster l'offre à :
Fox International
23600 Aurora Road
Bedford Heights, OH 44146
É.-U.
Attn: SonicWeb

Méthode de paiement
Chèque/mandat-poste/Carte de Crédit à l'ordre de :
Applica Consumer Products Inc.
Ne pas envoyer d'argent par le courrier.
Les commandes payables sur livraison ne sont pas acceptées.

Nom _____

Adresse _____

Ville _____

Province _____ Code postal _____

Prévoir un délai de 4 à 5 semaines pour la livraison. Prix sujets à changment.

Description du produit	Numéro de la pièce	Prix unitaire	Qté	Montant total
Boîte d'accessoires (IGT100)	177975-00	19,99 (\$ US)		\$ _____

☐ VISA
☐ DISCOVER

☐ MASTERCARD
☐ AMERICAN EXPRESS

Carte n°: _____
Date d'expiration: _____
Signature du détenteur de la carte: _____

Taxe de vente de l'État
(OH, NY, TX)

\$ _____

Frais de manutention

\$ 4.99

MONTANT TOTAL

\$ _____

1 Latch

2 Handles

† 3 Resonator Cap (177784)

4 Speaker (under Cap)

5 Frame

† 6 Pins (177779)

7 Column

8 LED Sound Indicator

9 Base

10 Cord Wrap (under Base)

11 Fragrance Strip

12 Hook

13 On/Off Control

1 Cerrojo

2 Asas

† 3 Casquete del resonador (177784)

4 Parlante (debajo de la tapa)

5 Armazón

† 6 Pinzas (177779)

7 Columna

8 Indicador de sonido LED
(DEL diodo emisor de luz)

9 Base

10 Enrollado para el cable (debajo de la base)

11 Gancho

12 Tira de fragancia con octenol

13 Control de encendido/apagado

1 Verrou

2 Poignées

† 3 Résonateur (177784)

4 Haut-parleur (sous Résonateur)

5 Cadre

† 6 Broches (177779)

7 Colonne

8 Indicateur Sonore DEL

9 Socle

10 Rangement du cordon (sous le Socle)

11 Crochet

12 Bande Odorante

13 Commande Marche/Arrêt

12

13

11

1

2

3

4

5

6

7

8

9

10

† Consumer replaceable/Reemplazable por el consumidor/
Remplaçable par le consommateur

EXTENSION CORDS:
The cord length of this appliance has been selected to reduce the possibility of tangling or tripping over a longer cord. If additional cord length is needed, an Outdoor-Rated extension cord may be used. Suitable extension cords are marked with suffix letters “W-A” and have a tag stating “suitable for use with outdoor appliances.” Use only 3-wire extension cords with 3-prong grounded plugs in 3-pole outlets. The cord must have an electrical rating equal to the rating of this appliance. If using an extension, be sure to arrange it so that it cannot be pulled or tripped on.

THE ELECTRICAL CORD
To avoid a circuit overload, do not operate another high wattage appliance on the same circuit. The cord length of this appliance has been selected to reduce the possibility of tangling or tripping over a longer cord. If additional cord length is needed, an extension cord rated not less than 10 amperes, 120 volts and with the Underwriters Laboratories listing, may be used. If using an extension, be sure to arrange it so that it cannot be pulled or tripped on.

How does the SonicWeb™ Insect Control work?
This device is designed to attract biting insects such as mosquitoes, flies, biting midges, and biting dragonflies by simulating the sound of a heartbeat and emitting a fragrance. These biting insects have a keen sense of smell, heat, and motion — they can detect fragrance from up to 300 ft. (100 m) away and are attracted to movement. Once drawn to the sound, heat, vibration, and scent of the device, insects will fly into the “Sticky Paper” where they are trapped by the strong adhesive. The SonicWeb™ Insect Control is intended PRIMARILY FOR OUTDOOR USE.

BEFORE FIRST USE
When you unpack the SonicWeb™ Insect Control, you will have to install the Sticky Paper and the Octenol Fragrance Strip before setting up the device in your yard. Take the unit outside and be sure to read all instructions before placing and turning on the unit.

How To Use – English

NOTE: Unroll the cord from the Cord Warp under the Base before you start.

1. Pull the Latch up to unlock the Handles.
2. Slide your hand under BOTH Handles and LIFT UP (A), then use both hands to separate the Handles and lower the Frame down. (B)
3. *To install the Octenol Fragrance Strip:* Lift the Resonator Cap off the Column and set it aside. Remove the Fragrance Strip from its pouch and be careful not to touch the exposed holes on its surface. Slip the hook through the hole at the top of the Frgrance Strip. Hang the Strip from one of the notches at the top of the Column (C).
4. *To install the Sticky Paper:* Push in on both sides of a sheet of Sticky Paper to “pop” it open into a circle (D). Slide the “fitted” Sticky Paper down over the Resonator Cap (E).
5. Carefully peel the protective corrugated covering off the Sticky Paper to expose the adhesive (F). Fold this covering over on to itself and **avoid contacting the adhesive side with your skin, clothing, or surfaces.**
6. Grasp both Handles and LIFT UP as you pull them toward the center. When the Handles meet in the middle, gently push down on them so they are properly “seated.” Close the Latch.
7. *To work most effectively:* Place the SonicWeb™ Insect Control between your home and where mosquitoes and other biting insects live (woods, pond, stream, etc.) — at least 30 – 45 ft. (9 m – 14 m) away from the area you want to protect (your house, deck, pool, porch, or patio). **DO NOT** place it next to a shed, garage, or solid structure nor in trees or shrubs.
8. Extend the 50 ft. (15 m) cord to the nearest grounded outlet. The On/Off Control must be mounted at least 1 ft. (.30 m) OFF THE GROUND for safe use and should be at least 10 ft. (3 m) away from the inner wall of a pool. Install a screw, nail or mounting hook to the outside of the house or another flat surface so that it is AT LEAST 1 ft. (.30 m) above the ground. Slip the On/Off Control onto the screw/hook and be sure the cord can comfortably reach the outlet.
9. Plug in the cord. Push “On” on the Control. You will see the LED Sound Indicator on the unit move simulating the motion of a heartbeat.
10. The SonicWeb™ device runs on low voltage and can be left on continuously throughout warm/hot seasons. When

finished using, push the Control to shut the unit Off and the LED lights will go out. Use the Cord Wrap under the Base for cord storage and store the unit in a cool, dry place such as a garage, basement, or loft.

NOTE: Keep adults, children, and pets away from the device once it’s placed. Any movement or scent can divert insects from the device.

Changing the Sticky Paper & Fragrance Strip
NOTE: You do not have to turn off or unplug the unit to change the Sticky Paper or Fragrance Strip.

1. The adhesive on the Sticky Paper is most effective for **about 1 week.** *To change the Sticky Paper,* pull the Latch up to unlock the Handles, slide your hand under BOTH Handles and **LIFT UP** (see A). Use both hands to separate the Handles and lower the Frame down. (see B)
2. Grasp the old Sticky Paper by its 2 Tabs and lift it straight up off the Resonator Cap. Avoid touching the surface of the Paper as it will be sticky and covered with dead insects.

CAUTION: Keep the Sticky Paper out of reach of children and animals. Dispose of used sticky paper in a sanitary manner (i.e. wrap it in newspaper and discard). In case of contact with adhesive, use vegetable oil or mineral oil to remove from skin. Use paint thinner, vegetable oil, or mineral oil to remove from floors or surfaces.

3. Replace with a new sheet of Sticky Paper by following the directions “*To install the Sticky Paper.*” Carefully peel the protective covering off the new Sticky Paper and **avoid contacting the adhesive side with your skin, clothing, or surfaces.**
4. LIFT UP on BOTH Handles as you pull them together toward the center. Gently push down on them so they are properly “seated.” Close the Latch.
5. Fragrance Strips should be effective for up to 30 days. Store replacement Octenol Fragrance Strips in a cool, dry place and out of reach of children until ready to use. *To change the Fragrance Strip:* follow the instructions to open the Frame and remove the Resonator Cap as detailed in “*To install the Fragrance Strip.*” Remove the old Strip from the Column, wrap it in several layers of newspaper, and dispose of it in the trash.

NOTE: Replacement kits (Model ITG100) of Sticky Papers and Fragrance Strips are available by filling out and mailing in the Order Form in this book, by logging on to: www.fightthebite.com or by calling 1-800-738-0245.

Care & Cleaning

NOTE: ALWAYS turn off the unit and unplug it before cleaning or servicing. If the unit or Resonator Cap comes in contact with the adhesive, use paint thinner, vegetable oil, or mineral oil to remove it.

1. The Resonator Cap can be lifted straight up and off the Column. It can be immersed in soapy water or washed by hand using a sponge or nylon pad with liquid detergent. Dry thoroughly with a soft cloth before replacing it.
2. Do not use abrasive cleaners, coarse cleansers, or metal pads on any part of this unit. **DO NOT IMMERSE THE UNIT.** Wipe it with a damp sponge or cloth and dish detergent. Never spray or apply cleaners directly onto the unit. Dry thoroughly with a soft cloth before operating again.

